


Creëer je eigen Keyboard Shortcuts!

Vanaf PTC Creo Parametric 4.0 zijn er standaard Keyboard Shortcuts te gebruiken. U kunt naast de standaard Keyboard Shortcuts ook eigen Keyboard Shortcuts toevoegen. Via de Creo Parametric Options-dialogoogvenster (**File > Options > Keyboard Shortcuts**) kunt u de opdrachten filteren die als volgt worden weergegeven:

- All Commands – Geeft alle opdrachten weer, inclusief opdrachten waaraan geen sneltoetsen zijn toegewezen.
- Commands with assigned shortcuts – Geeft alle opdrachten weer waaraan sneltoetsen zijn toegewezen.
- Commands without assigned shortcuts – Geeft alle opdrachten weer waaraan geen sneltoetsen zijn toegewezen.

Als u een snelkoppeling aan een opdracht wilt toewijzen, klikt u in het veld Snelkoppeling en typt de snelkoppeling die je wilt gebruiken. Het systeem voegt die snelkoppeling toe aan die opdracht.

Als u een sneltoets toewijst die al bestaat, waarschuwt het systeem u voor dit feit en geeft u de mogelijkheid om de sneltoets naar de nieuwe opdracht te wijzigen of deze weg te gooien.

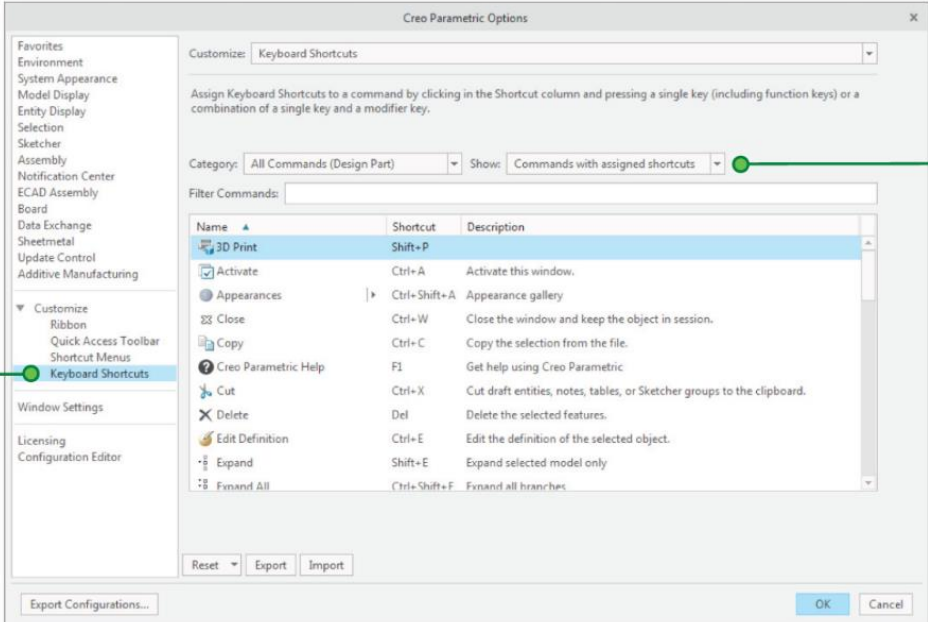

Keyboard shortcut customization

Filter options

Name	Shortcut	Description
3D Print	Shift+P	
Activate	Ctrl+A	Activate this window.
Appearances	Ctrl+Shift+A	Appearance gallery
Close	Ctrl+W	Close the window and keep the object in session.
Copy	Ctrl+C	Copy the selection from the file.
Creo Parametric Help	F1	Get help using Creo Parametric.
Cut	Ctrl+X	Cut draft entities, notes, tables, or Sketcher groups to the clipboard.
Delete	Del	Delete the selected features.
Edit Definition	Ctrl+E	Edit the definition of the selected object.
Expand	Shift+E	Expand selected model only
Expand All	Ctrl+Shift+F	Expand all branches

Exercise: Customize the keyboard shortcuts

1. Click **File > Options**.
2. In the Creo Parametric Options dialog box, select the **Keyboard Shortcuts** category.
3. Select **Commands with assigned shortcuts** from the Show drop-down list.
4. Notice the various commands and their shortcuts.

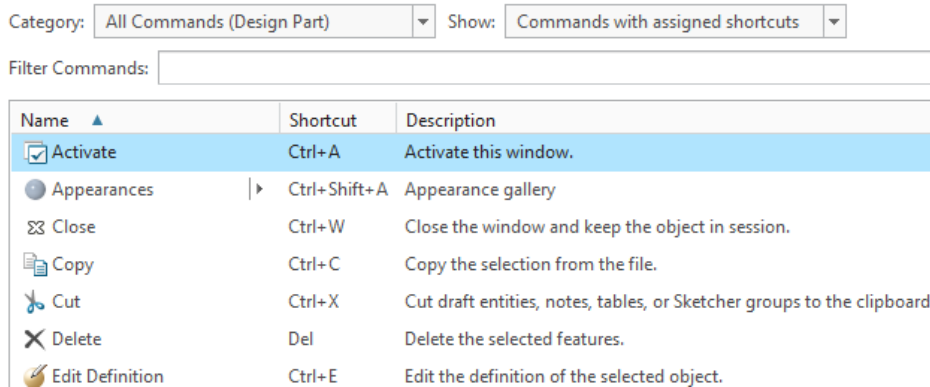



Figure 16

5. Select **Commands without assigned shortcuts** from the Show drop-down list.
6. Type **pla** in the Filter Commands field.
7. Click in the **Shortcut** column for **Plane Display** .
8. Press **SHIFT+P**.

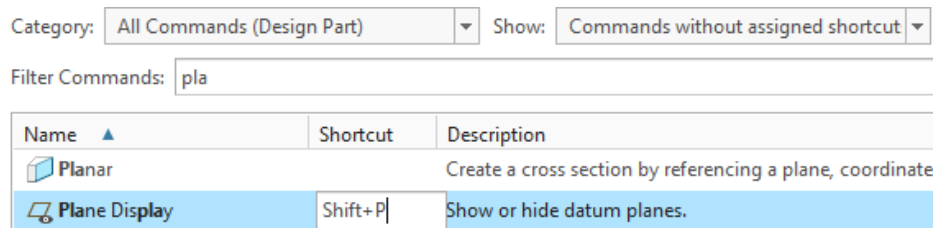


Figure 17

9. Click **OK**.